IIST340-01 - 21-11-2023

GB

Code	Model
ECSEM454MID	M3PRO 1-5 MID

Three phase energy meter, measure via CT 1 to 10000 A with MID declaration of conformity and 2 pulse (S0) outputs.

MID certification concerns active energy only.

User instruction.

Safety instructions

- Read this manual carefully BEFORE installing the instrument.
- This device must be installed indoor only by a professional electrician fitter according to local applicable installation standards.
- Do not plug in or unplug this product when the power supplying is ON. Its use is only permitted within the limits shown and stated in the installation instructions. The device and the equipement connected can be destroyed by loads exceeding the values stated.
- Any type of intervention on the products, including cases in which they cease to function or present defects, can be dangerous for the operator's safety and relieves the Manufacturer from all civil and criminal liability.

Function

This 4 quadrants meter measures the active and reactive energy used in an electrical installation. This device can manage 2 tariffs by 230 VAC digital input.
Only the total active energy register can be used for billing purposes according to measuring instrument directive (MID).
- Active Energy Class B (according to EN 50470-3:2022)
- Active Power Class 1 (according to IEC 62053-21:2020 and IEC 61557-12:2018)
- Reactive Energy Class 2 (according to IEC 62053-23:2020)
- Reactive Power Class 2 (according to IEC 62053-21:2020).

This device has a backlighted LCD and 3 push-button keys to read Energies, V, I, PF, F, P, Q and to configure some parameters. The design and manufacture of this meter comply with Standard EN 50470-3:2022 requirements.

Power factor
Convention according to IEC 62053-23:2020

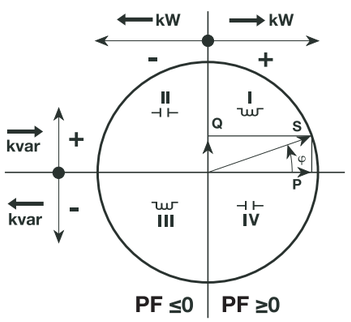

Layout of device

LCD display

- Σ — Energy for all tariffs
- T1 8 — Tariff
- Reactive power inductive/ capacitive
- L2 — Phase indicator

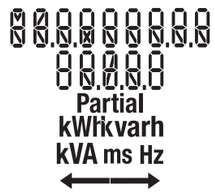

- Main Energy Register, not resettable
- Partial Energy Register, resettable
- Units
- Energy import (consumption →)
  Energy export (production ←)

Commands

- **UP button:** to scroll pages and change parameters
- **DOWN button:** to scroll pages and change parameters
- **MENU/ESC button:** to change menu and stop modification procedure of a parameter
- **OK button:** to confirm the modification of a parameter

MID certified

A) Device code and certification data indications

B) Safety-sealing between upper and lower housing part

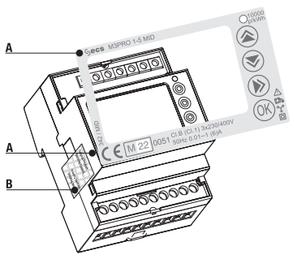

Dimensions

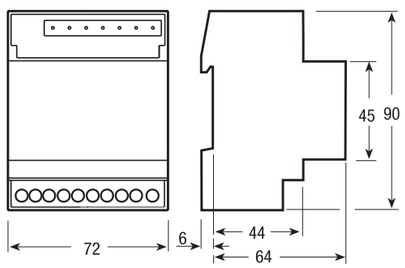

Sealable terminal cover

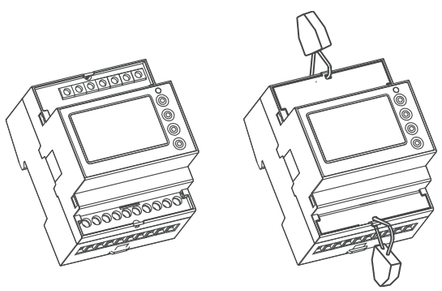

Wiring

Intended use
The Energy Meter is suitable for use on both impedance grounded networks and not grounded networks.

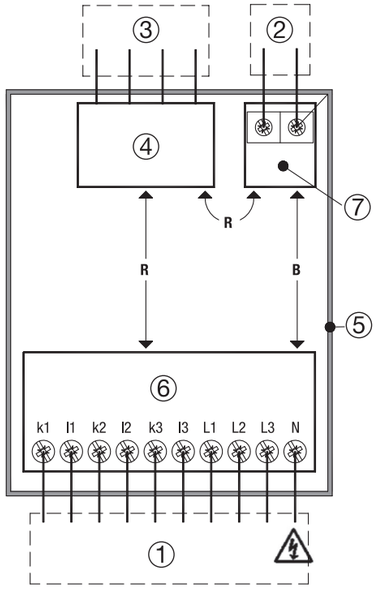

There are no accessible parts

Legend:

B =	Basic insulation
D =	Double insulation
R =	Reinforced insulation
F =	Functional insulation
①	**HLV TERMINAL,** 1 terminal for neutral
②	**HLV TERMINAL,** 2 terminal for tariff input
③	**SELV TERMINALS,** 4 terminals or 2RJ45 connectors
④	**SELV CIRCUIT**, (communication) working voltage <25 Vac, <60Vdc
⑤	PLASTIC CASE (NOT EARTHED)
⑥	**HLV CIRCUIT,** (mains) Working Voltage = 300 Vac
⑦	**HLV CIRCUIT,** (tariff input) working voltage = 300 Vac

Wiring diagram

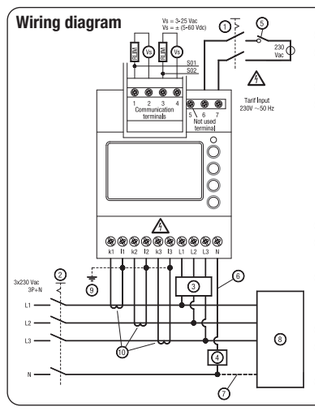

① Bipolar disconnector 230Vac
② Four-pole disconnector 3X230Vac, 3P+N.
The disconnectors must be clearly labelled and must be easily accessible by the installer
③ 3 fuses or 3 circuit breakers
④ Fuse or circuit breaker in series with the neutral conductor, to be adopted in case the source neutral is not earthed. The installer is responsible for coordinating the rating and the characteristics of the supply side overcurrent protection. The devices must be correctly sized with respect to the installation voltage, the maximum overcurrent applicable to the meter and the fault current available. The following parameters are to be taken into consideration:
- Maximum current = 6A
- Maximum Overload current = 10A
- Maximum Voltage = 276 Vac

⑤ Control circuit for the tariff: Open contact: Tariff 1, Close contact: Tariff 2
⑥ The connection of the Neutral to the Energy Meter is strictly MANDATORY. Failure to connect affects not only the quality of the measurements, but also electrical safety.
⑦ The connection of the Neutral to the load is not mandatory. However, consider that in a 3P + N network, if the Neutral is not connected to the load, the measurements referred to L1, L2 and L3 no longer have any meaning. Only the 3-phase (ΣL) measurements remain significant.
⑧ 3 wires or 4 wires electrical load.
⑨ The earthing of the CTs' secondary winding is regulated by the national standards of the country where the instrument is installed.
⑩ 3 CTs with basic insulation.

Installation and uninstallation

The disconnectors (reference ① and ② in the wiring diagram) must be easy to identify and to operate and must be close to the Meter. They both must be in "OFF" position (open circuits) from the beginning to the end of the installation or of the uninstallation. The Energy Meter, the disconnectors and the overload current protection devices must be easily identifiable, must be installed in an adequate cabinet (IP51 and V1) and it must be easy to intervene on them whenever appropriate. Inside the cabinet, do not install any other device with a flammability class worse than V1.

Commissioning

Recommendations
Check the following before putting it into service:
- Make sure that no dangerous voltages are connected to the SELV terminals.
- Make sure that a phase has not been connected to the Neutral terminal (this would cause the internal protections to intervene with permanent damage to the Meter).
- Check that the main page appears on the display (see menu description) and not the Phase Sequence Error page.

Maintenance

- Make sure that no voltage is applied to the instrument.
- Only dry cleaning is allowed with a natural fiber cloth (for example cotton or linen) or synthetic fabric that does not leave residual fibers that can remain on the surface of the Energy Meter or that can penetrate into the Energy Meter.

For this Energy meter, no maintenance, repair or replacement of parts is foreseen. Such interventions are to be considered prohibited. In case of malfunction, it must be replaced.

Help in case of problems

Error condition
When partial energy blinks, reset partial energy (maximum partial energy register). When the display shows the message ERROR N02 or ERROR N03, the meter has got a malfunction and must be replaced.

Diagnostic message

The cabling sequence (L1-L2-L3) is wrong. L1, L2 and L3 icons blink. Invert the voltage wires of 2 phases (phase 1 < > phase 2 or phase 2 < > phase 3). Otherwise, by pressing the «OK» button for at least 5 seconds, the message disappears until the next restart.

Notes

Cable section. Cable stripping length
Screwdriver type. Maximum terminal screw torque
Adopted cables shall retard flame propagation.
Cables must therefore comply with IEC 60332-1-2:2004 or have a flammability rate UL 2556 VW-1

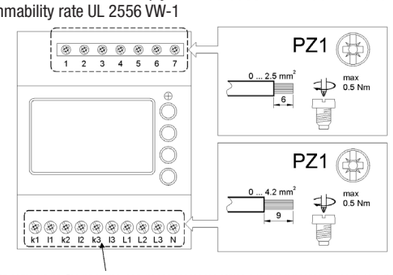

Note on cable sizing. For the current and voltage connection cables, it is recommended to use multi-strand copper cables with AWG 11 (with a 4.2 mm2 section), as they are suitable for Imax = 6A and Iovl = 10A. The use of cables with a smaller section falls under the responsibility of the installer, who must, in this case, ensure that the maximum permanent current (Imax) and the overload current (Iovl) remain proportionally lower for the entire duration of use. For example, with AWG 14 cable (2.1 mm2) the permanently applied current (Imax) cannot exceed 3A and the overload current (Iovl) 5A. The overcurrent protective device must therefore be sized accordingly.

14 rue Edouard Petit
42000 St-Etienne
Tel : +33 477 92 03 56
Email : contact@rg2i.com
www.rg2i.com

General Menu

Main Menu

Three Phase Energies List

Main Page

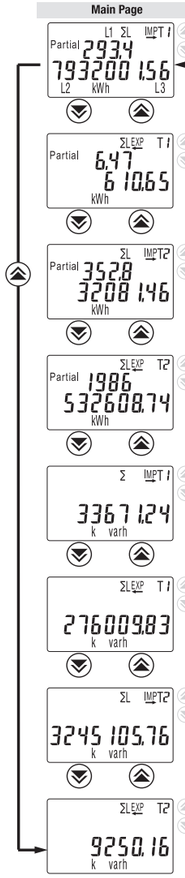

- **Active Imported Energy tariff T1 with partial register**
- **Active Exported Energy tariff T1 with partial register**
- **Active Imported Energy tariff T2 with partial register**
- **Active Exported Energy tariff T2 with partial register**
- **Reactive Imported Energy tariff T1**
- **Reactive Exported Energy tariff T1**
- **Reactive Imported Energy tariff T2**
- **Reactive Exported Energy tariff T2**

Selection Menu

By Pushing (⏭) from Any page of Main Menu

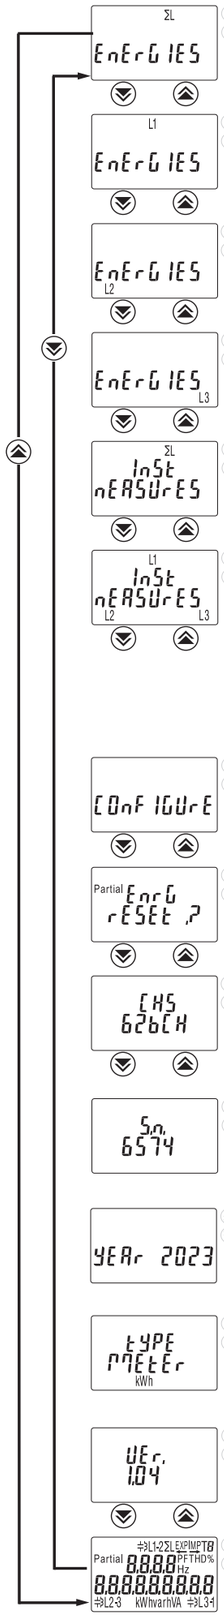

- (*) OK → **Three Phase Energies List**
- (*) OK → **Phase 1 Energies List**
- (*) OK → **Phase 2 Energies List**
- (*) OK → **Phase 3 Energies List**
- (*) OK → **Three Phase Instantaneous measures active power, reactive power, apparent power, frequency, neutral current**
- (*) OK → **Phase L1, L2 & L3 Instantaneous measures active power L1, active power L2, active power L3, reactive power L1, reactive power L2, reactive power L3, apparent powers, line voltages, system voltage, phase current, power factors, voltage THDs, currents THDs**
- (*) OK → **Parameters List (Read and/or Modify)**
- (*) OK → **Partial Energies Reset Procedure**
- **Firmware checksum**
- **Serial Number (page required by MID directive)**
- **Year of manufacturing (page required by MID directive)**
- **Instrument type (page required by MID directive)**
- **Firmware version**
- **Display test**

Password

In Configure Menu it is possible to protect the access to sub-menues of Selection Menu by a password.

Password can be enabled (ON password) or disabled (OFF password), the default value is OFF

Once request, to enter the password user must push both UP button and DOWN button at the same time for 4 seconds

Parameters in S0 models

Pulses per kWh
- **1 ... 10000 depending on CT ratio**
- **The default value is 5000**

Pulse time length
- **Duration of ON pulse for S0 outputs: 30 to 100 ms.**
- **The default is 100 ms**

S0 ouputs configuration mode

■ **In - Out**
- **S01 proportional to Imported Active Power**
- **S02 proportional to Exported Active Power**

■ **Act-React**
- **S01 proportional to Imported Active Power**
- **S02 proportional to Imported Reactive Power**

■ **TAR1-TAR2**
- **S01 proportional to Imported Active Power under T1**
- **S02 proportional to Imported Active Power under T2**

- **Password Enabled/Disabled**

Parameters List

External CT related parameters

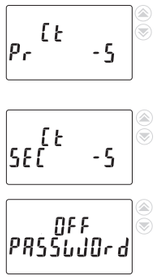

External CT Primary nominal current
- **../5A: configurable between 5 A to 10000 A with step 5 A**
  ../1A: configurable between 1 A to 2000 A with step 1 A
- **The default value is 5 A**

External CT Secondary nominal current
- **../1A or ../5A**
- **The default value is -5**

- **Password Enabled/Disabled**

In order to read values referred to Secondary side of CTs, push the ESCAPE button for a long time (10 seconds), in the Main Page. For two minutes (120 seconds), the whole set of parameters are displayed with their values referred to Secondary side of CTs, with the CT icon blinking. Also values transmitted through internal bus are referred to Secondary side for 2 minutes

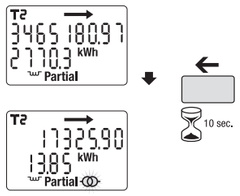

Technical data

Data in compliance with EN 62052-11:2021+A11:2022, EN 62052-31:2016-06, EN 50470-3:2022, EN 62059-32-1:2012

General characteristics				
Housing	DIN 43880		**DIN**	4
Mounting	EN 60715		**DIN rail**	35 mm
Depth			**mm**	60
Weight			**g**	293
Operating features				
Connection	to three-phase network - number of wires		**-**	4
Storage of energy values and configuration	Internal flash non volatile memory		**-**	☑
Tariff	for active and reactive energy		**-**	T1 … T2 230V
Approval (EN 50470-3:2022)				
Connection			**-**	CT /5A - CT /1A
Reference Voltage **(Un)**	phase / neutral		**VAC**	230
	phase / phase		**VAC**	400
Nominal Current **(In)**			**A**	1
Minimum Current **(Imin)**			**A**	0.01
Maximum Current **(Imax)**			**A**	6
Starting Current **(Ist)**			**A**	0.002
External CT	max. CT ratio		**-**	10000/5 2000/1
Reference Frequency **(fn)**			**Hz**	50
Number of phases / number of wires			**-**	3 / 4
Certified Measures			**kWh**	→ kWh ← kWh
Accuracy				
- Active Energies (accord. to EN 50470-3:2022)			**classe**	B / 1
- Active Powers (accord. to IEC 62053-21:2020 and IEC 61557-12:2018)				
- Reactive Energies (accord. to IEC 62053-23:2020)			**classe**	2
- Reactive Power (accord. to IEC 62053-21:2020)				
Supply Voltage and Power Consumption				
Operating Supply Voltage range			**V**	92 … 276 / 160 … 480
Maximum Power Consumption (Voltage circuit)			**VA / W**	≤2 / 0.6
Maximum VA burden (Current circuit) @ **Imax**			**VA**	≤0.2
Voltage Input Waveform			**-**	AC
Voltage impedance			**MΩ**	1
Current impedance			**MΩ**	≤20
Overload capability				
Voltage	continuous	phase / neutral	**VAC**	276
	temporary (1 s)	phase / neutral	**VAC**	300
	continuous	phase / phase	**VAC**	480
	temporary (1 s)	phase / phase	**VAC**	800
Current	Maximum		**A**	6
	temporary (0.5 ms)		**A**	120
Measuring Features				
Voltage range	phase / neutral		**VAC**	92 … 276
	phase / phase		**VAC**	160 … 480
Current range			**A**	0.001 … 6
Frequency range			**Hz**	45 … 65
Measured Quantities			**-**	V, A, kWh, kvarh, PF, Hz, kW, kvar
3 phases Energy calculation			**-**	WELMEC
Display features				
Display type	LCD with backlight		**-**	7.2 +3.2
Active Energy	7 digits + 2 decimal digits		**kWh**	0.01 … 99999999.9
Reactive Energy	7 digits + 2 decimal digits		**kvarh**	0.01 … 99999999.9
Voltage	3 digits + 1 decimal digit		**V**	92.0 … 276.0
Current	2 digits + 2 decimal digits / 3+1 / 4+0		**A**	0.01 … 6000
Power factor	1 digit + 3 decimal digits with sign + capac./induc. indic.		**-**	-1.000 … 1.000
Frequency	2 digits + 2 decimal digits		**Hz**	45.00 … 65.00
Active Power	2 digits + 2 decimal digits		**kW**	0.00 … 1987
Reactive Power	2 digits + 2 decimal digits		**kvar**	0.00 … 1987
Apparent Power	2 digits + 2 decimal digits		**kVA**	0.00 … 1987
Display refresh period			**s**	1
Optical metrological LED				
Front mounted red LED (meter constant)	proportional to active imp/exp Energy		**imp/kWh**	10000
Safety				
Utilization category			**-**	UC1
Overvoltage category			**-**	3
Protective class			**classe**	II
AC voltage test (EN 50470-3:2022)			**kV**	4
Degree of pollution			**-**	2
Operational voltage			**V**	300
Impulse voltage test **(Uimp)**			**1.2/50**	6.4
Housing material flame resistance			**UL 94**	classe V0
Safety-sealing between upper and lower housing part			**-**	☑
Printed circuit board flammability class			**-**	V1
Material Group			**-**	IIIa
IR Connectable Communication Modules				
For communication modules			**-**	☑
Pulse Outputs (S0 signals)	acc. to IEC 62053-3			
Pulse Output 1	adjustable		**-**	kWh (T1) →, kWh → , kWh →
Pulse Output 2	adjustable		**-**	kWh (T2) →, kWh ← , kvarh →
Pulse Rate	adjustable		**p/kWh**	1 ... N (*) **(*) N - dep. on CT-ratio and Pulse on Time**
Pulse ON-time	adjustable		**ms**	30 ... 100
Pulse ON maximum current			**mA**	90
Pulse OFF leakage current			**µA**	1
Isolation class			**-**	SELV circuit
Tariff				
Tariff 1			**-**	☑
Tariff 2			**VAC**	230 ±20%
Input impedance			**kΩ**	224
Environmental conditions				
Storage temperature range			**°C**	-25 … +70
Operating temperature range			**°C**	-25 … +55
Mechanical environment			**-**	M1
Electromagnetic environment			**-**	E2
Installation	indoor only		**-**	☑
Altitude (max.)			**m**	≤2000
Humidity	yearly average, without condensation		**-**	≤75%
	on 30 days per year, without condensation		**-**	≤95%
IP rating	in built-in condition (front part)		**-**	IP51
	terminal block		**-**	IP20
Emission class compatibility CISPR 32			**classe**	B